


**C10249**  
Twilight



**C10269**  
Circolo



Figure 1

**Lamping Specifications**

Incandescent

- Three, B-10, 60w Max each

Fluorescent

- Non-Dimming 120v-277v  
Two, CFS16W/GR10q-4
- Dimming 120v or 277v  
Two, CFTR18W/GX24Q-2

**IMPORTANT | CAUTION**

Read all instructions thoroughly, and turn off power at circuit breaker or fuse box before proceeding.

**IMPORTANT! AT ALL TIMES WIRING TO BE DONE PER NATIONAL ELECTRIC CODES (NEC) OR APPLICABLE LOCAL CODES.**

**Step 1** Carefully unpack fixture and remove shade from electrical back plate. To remove shade, locate and remove lower screws that retain the perforated bottom diffuser. Remove diffuser to expose knob that retains the decorative shade to the electrical backplate. Remove knob and separate decorative shade assembly from electrical backplate.

**Step 2** For Incandescent applications proceed to step three. For fluorescent application remove thumb screws from the ballast bracket and lift the ballast away from the center mounting holes to expose the center access hole.

**Step 3** Lift electrical backplate into position over the junction box. Orient the cover ring so that the holes line up with the backplate and threaded holes in the junction box. Attach fixture back plate to the outlet box using hardware provided. (See Fig 1)

**Step 4** Make wire connections: connect black fixture wire to black supply wire (load typical); white fixture wire to white supply wire (neutral); attach fixture ground wire to ground wire or ground screw. Use wire connectors provided and push connections inside outlet box. For fluorescent applications if supply wires are located within 3" of ballast, use wire rated for at least 90C (194F).

**Step 5** For fluorescent application replace the ballast and bracket into position onto backplate and secure with thumb knobs.

**Step 6** Install lamps per label/ballast recommendations.

**Step 7** Install decorative shade box. Set the top portion of the deco shade box on the upper shelf of the backplate at a slight angle and align the posts with the holes in the top bracket. Carefully pull down and press the bottom towards the back plate. It may be necessary to pull the acrylic diffuser outwards to clear the backplate. (See Fig 3)

**Step 8** Secure the decorative shade box to the electrical backplate with the threaded decorative knob assembly. (See Fig 4)

**Step 9** Install lower perforated diffuser and secure into position with decorative hex head screws and allen wrench. (See Fig 5)

**Step 10** Restore power to circuit and illuminate lamps.



Figure 3



Figure 4


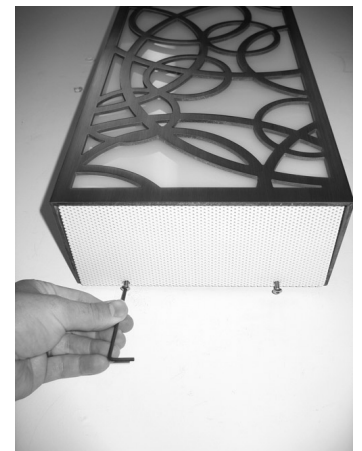


Figure 5

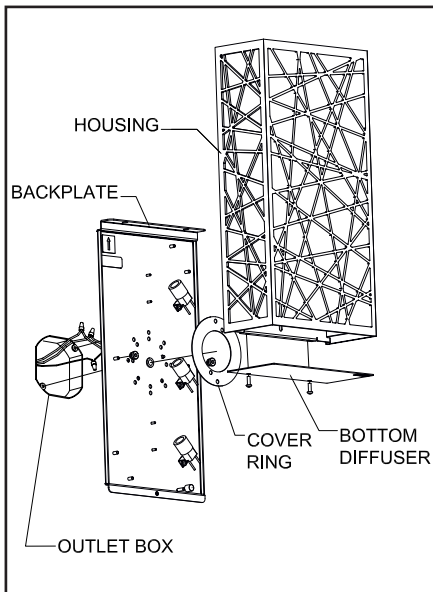

Exploded View

Thank you for your purchase and enjoy your Boyd lighting fixture.